
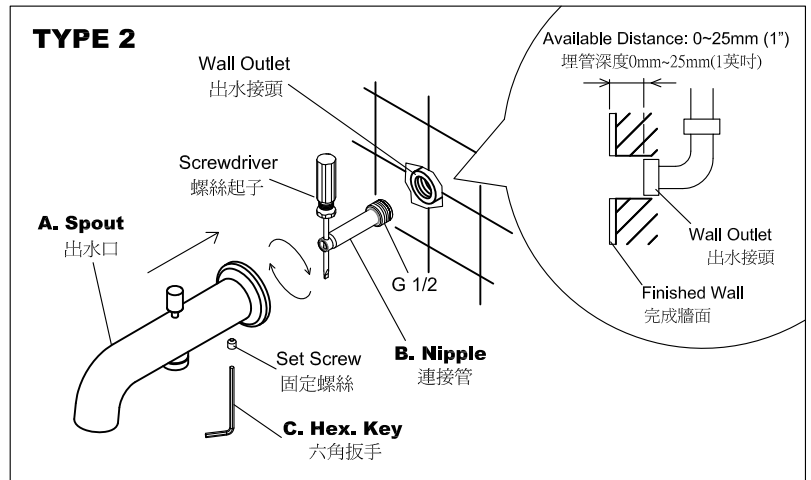


INSTALLATION INSTRUCTIONS

SPOUT

出水口安裝說明

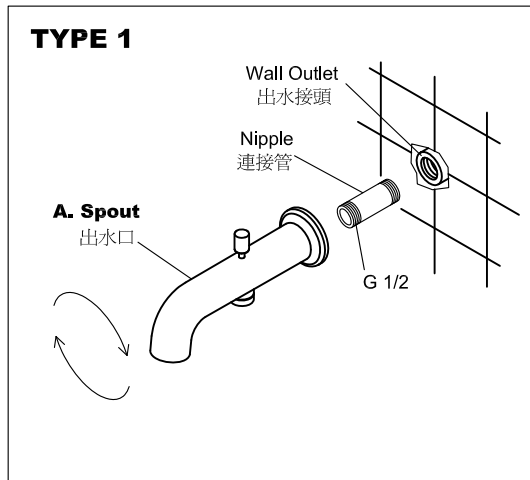

TYPE 1

1. Check the distance between inner thread of **Spout** and connector of **Wall Outlet**, and then choose the proper **Nipple** for connecting.

先量測牆壁出水接頭與出水口內牙距離，然後依量測結果取適當長度的連接管。

2. Apply the pipe compound or thread sealant tape to the threads of both sides of **Nipple**, and then screw the **Spout** into the **Wall Outlet** with **Nipple**.

將連接管的外牙塗上牙管膠或包覆止洩帶，然後利用連接管將出水口鎖入牆壁出水接頭。

TYPE 2

1. Before installation, make sure if the available distance from **Wall Outlet** to **Finished Wall** is in 0~25mm (1").

先測量出水接頭與完成牆面是否在深度0~25mm(1英吋)之間，確認距離在此範圍內方可進行下一步驟。

2. Apply the pipe compound or thread sealant tape to the thread of **Nipple**, and then use the **Screwdriver** to thread the **Nipple** into **Wall Outlet**. Loosen the **Set Screw** of **Spout** with **Hex. Key**, and then fix the **Spout** to the **Nipple** to finish the installation.

將連接管的外牙塗上牙管膠或包覆止洩帶，利用螺絲起子將連接管鎖入牆壁出水接頭。先利用六角扳手將出水口下方的固定螺絲拆除，然後接上出水口並調整好位置，再利用六角扳手鎖上固定螺絲。

CAUTION : Prevent The Risk Of Product Damage.

注意：為增加產品使用壽命，請依說明清潔供水管路。

Remove the aerator and fully turn on the faucet and run for 1 minute after finish installation, and then turn off the water and reinstall the aerator.

完成安裝之後，把起泡器移開，把水全部轉開持續一分鐘，然後把水關掉再把起泡器裝回去。

FIXING CONTENTS

組配件內容

