


INSTALLATION INSTRUCTIONS

SINGLE HANDLE KITCHEN FAUCET W/SPRAY

廚房單槍龍頭(附:噴槍)安裝說明

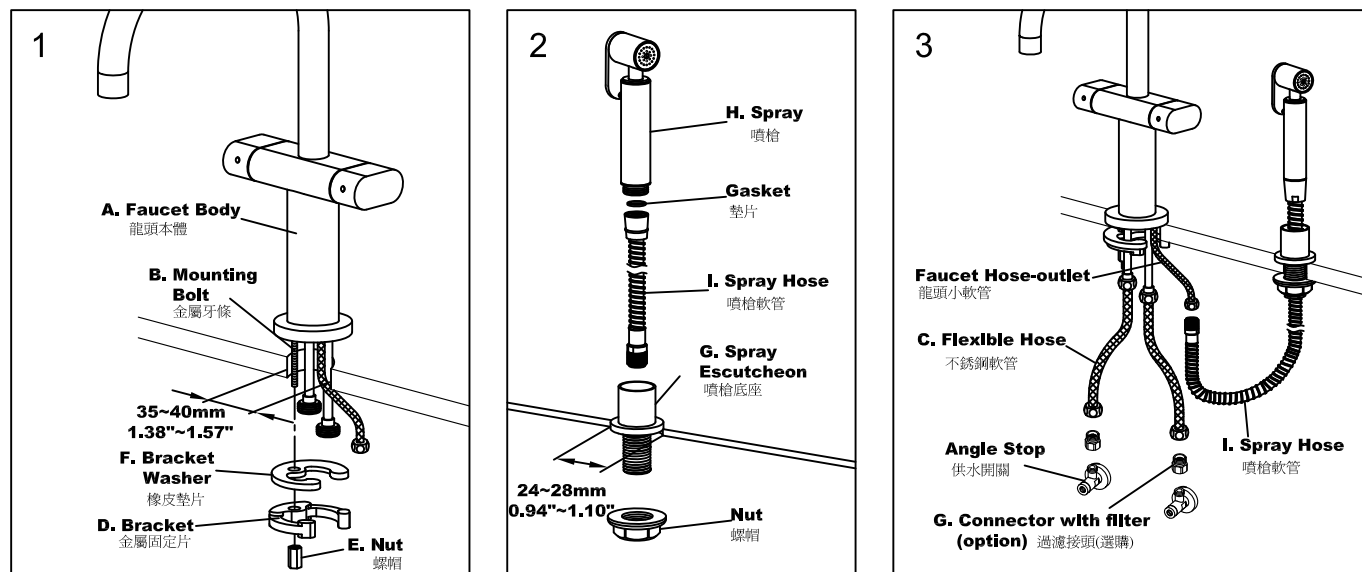

1. Screw **Mounting Bolt** into bottom of **Faucet Body**, position **Faucet Body** on fixture and place **Bracket** with **Bracket Washer** and **Nut** onto **Mounting Bolt**, then tighten **Nut** securely. (Fig.1)
將金屬牙條鎖緊固定於龍頭本體。從金屬牙條下方依序套入橡皮墊片、金屬固定片和螺帽，確認方向位置後，鎖緊螺帽固定龍頭即可。(圖.1)
2. Remove the **Lock Nut** from the **Spray Escutcheon** first, then insert the **Spray Escutcheon** into the deck hole and tighten the **Lock Nut** to secure the **Spray Escutcheon** in place. (Fig.2)
將噴槍底座上的螺帽鬆開，然後將噴槍底座穿過檯面洞口，鎖緊螺帽固定噴槍底座。
3. Install **Connector with filter** onto the outlet of **Angle Stop** first. Insert **Flexible Hoses** into the bottom of **Faucet Body**, then connect **Flexible Hoses** to **Connector with filter**. (Fig.3)
先連接過濾接頭到進水開關，將不銹鋼軟管鎖入龍頭本體，並連接到過濾接頭。(圖.3)
4. Assemble the **Spray** with **Spray Hose**, then insert the **Spray Hose** through the **Spray Escutcheon** and connect the **Spray Hose** to **Faucet Hose-outlet**, tighten it. (Fig.3)
組合噴槍軟管與噴槍，並連結鎖緊噴槍軟管與龍頭小軟管接頭。(圖.3)

CAUTION : Risk Of Product Damage.

注意：為增加產品使用壽命，請依說明清潔供水管路。

a. Turn the angle stops (water suppliers) on and run for 1 minute before connect supply hose (flexible hose) to faucet body. or b./

安裝編織管之前，先把供水開關全開排水一分鐘。或 b.

b. Connect and tighten the faucet and angle stops with supply hose (flexible hose) to finish installation, then remove the aerator, fully turn on the hot and cold water valves on faucet and run for 1 minute, then turn off the water and reinstall the aerator.

把龍頭、供水開關及編織管接好並鎖緊之後，把起泡器移開，把熱水及冷水全部轉開一分鐘，然後把水關掉再把起泡器裝回去。

MAINTAINING

維護方式

1. To clean the plastic meshes cover, please using 4mm **Hex Key** to remove the plastic meshes cover only as attached figure shown.

清潔噴灑頭塑膠蓋，如圖指示，使用 4mm 六角扳手開啓或裝置噴灑頭塑膠蓋。

CAUTION

注意事項




1. Do not remove inner metal seal. Reassembly the inner metal seal parts may cause the sprayer to lose function or damage the sprayer.

請勿取出內部金屬止水零件。重新組裝內部金屬止水零件，可能導致噴槍功能失效或嚴重損壞噴槍。

2. Do not overtighten the plastic meshes cover when reassembly, or may damage the hex hole of plastic meshes cover.

重新裝置噴灑頭塑膠蓋時，請勿過度鎖緊，損壞塑膠六角內孔。

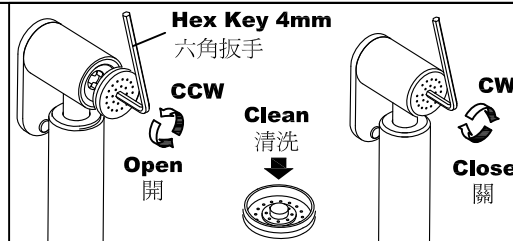

FIXING CONTENTS

組配件內容

