


INSTALLATION INSTRUCTIONS

6922 扶手架安裝說明

1. Select proper position for product and mark centers of mounting holes by using a spirit level and refer to the actual product for distance between hole centers.
請先選取預定安裝的位置，並在牆壁上畫上預定鑽孔記號，確認鑽孔的位置是在同一水平線上，並以產品比對確認鑽孔的距離，如圖示。
2. Using a 10mm drill-bit drills the holes in the marked positions to a depth of 55mm.
當安裝在水泥牆，使用10mm鑽頭，鑽孔深度55mm。
3. Insert the Bracket Anchor to the hole on the wall, and then tighten the Bracket Anchor bolt with wrench to fit it on wall.
嵌入固定基座並使之齊平於牆面，用扳手鎖緊固定基座。
4. Loosen the Set Screws of Main Body first, slide the Main Body over the Bracket Anchors, and then tighten the Set Screws to finish the installation.
用隨附六角扳手先鬆開本體下方的埋頭螺絲，使扶手架能順利套進固定基座後，再鎖緊下方的埋頭螺絲，並確定完成後固定不會搖動。

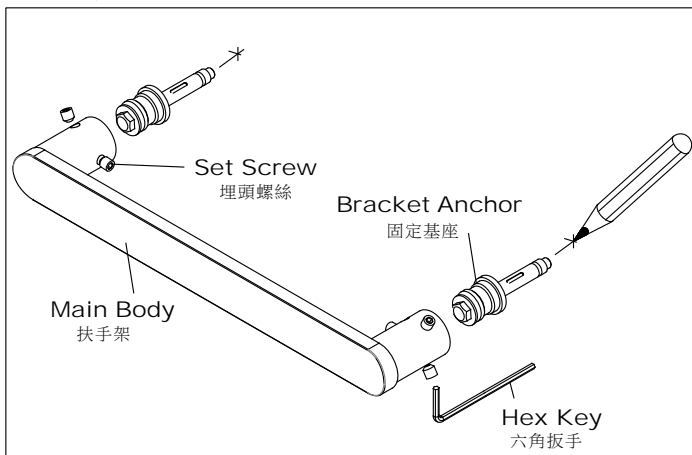

6922 GRAB BAR

